


# WORK-GUARD

by **Result**®

## R348X - LIGHTWEIGHT SAFETY TRAINER INNER SOLE LENGTH/WIDTH

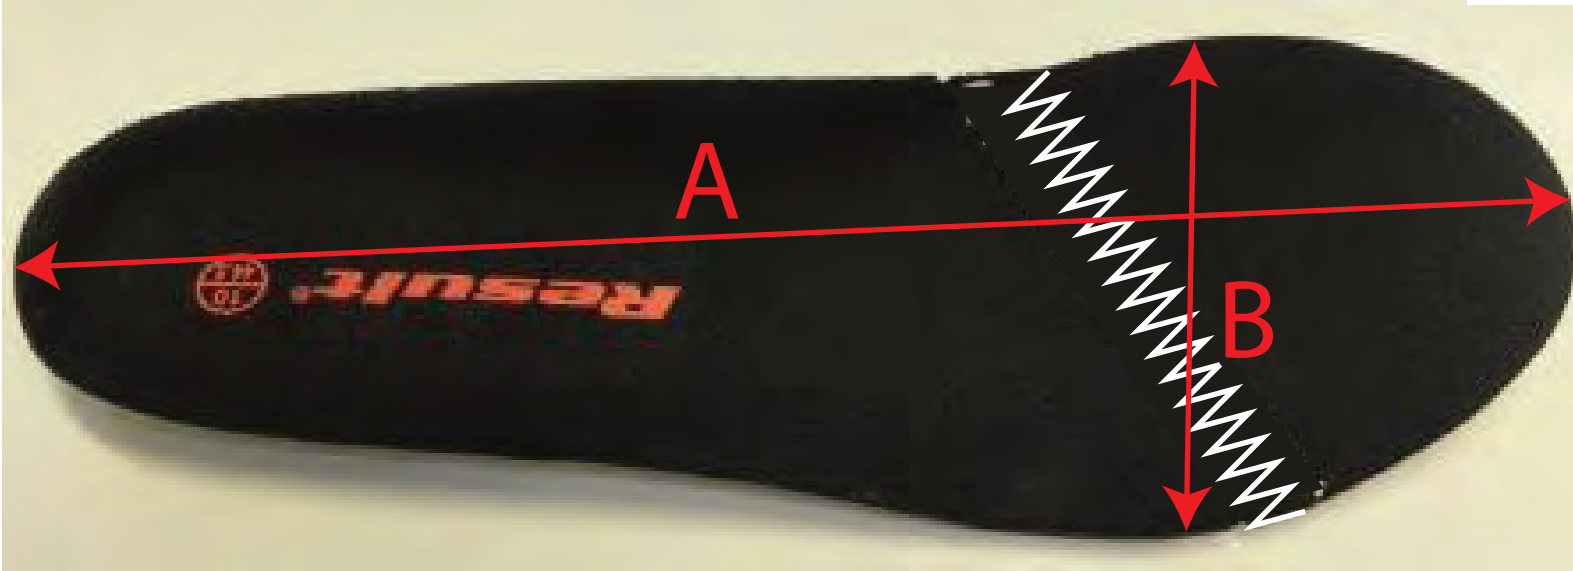

A = INSOLE LENGTH FROM INNER HEEL CURVE TO LONGEST POINT AT TOE  
B = INSOLE WIDTH ACROSS WIDEST PART.

SIZE		LENGTH	WIDTH
UK	EURO	A	B
7	41	26.2	9.2
8	42	27.0	9.7
9	43	27.4	9.9
10	44.5	28.0	10.0
11	46.0	28.6	10.2
12	47	29.6	10.3

Measures given in Cms